


How to add POE camera to Ispy

1,Use RTSP to add

1、 main stream: `rtsp://ip address:554/live/0/MAIN`

2、 vice stream: `rtsp://ip address:554/live/0/SUB`

Find “FFMPEG (H264)” this column, fill in information of RTSP in the URL.After adding can test test is successful

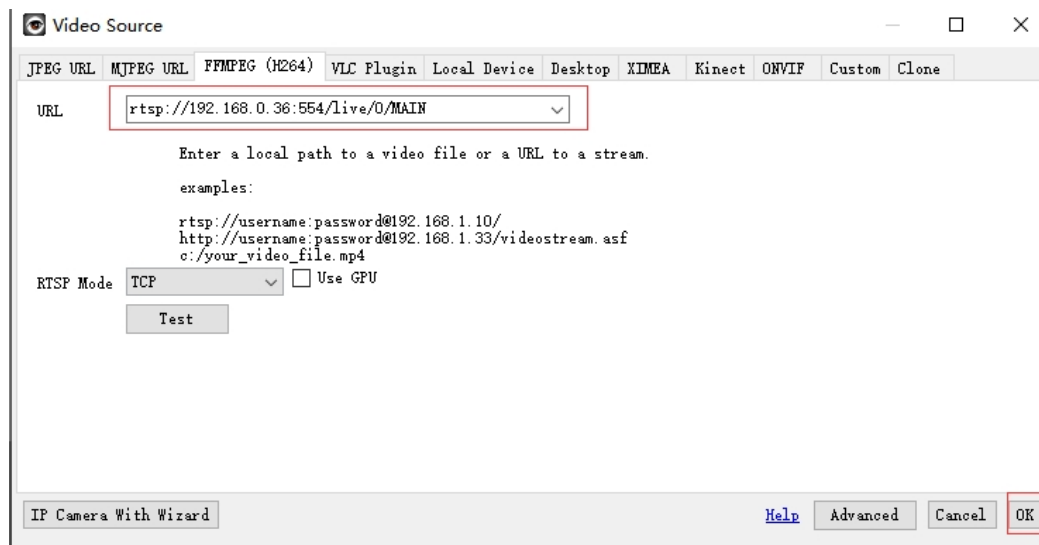

Note: The password is the camera's login password, if you change camera password, here password must be consistent

Edit Camera (ID: 1, DIR: ENKDF)

Camera | Motion Detection | Alerts | Recording | PTZ | Images | FTP | Cloud Storage | Scheduling | Storage

Video Source

Source

Name

Groups [Help](#)

Camera Active Fill

Transform

Timestamp

Mask Image

Picture In Picture

Maximum Framerate When Recording

Microphone

Microphone None [Help](#)

Ignore Audio

Talk

Camera Model [Settings](#)

IP Address Port

Username Password

Exit this to enable alerts and recording [Copy To](#) [Help](#)