

How to view POE camera on VLC Player

(For both Windows and Mac PC, please download the corresponding version)


Add camera via RTSP data

RTSP data as below

rtsp://username:password@x.x.x.x/stream0

rtsp://username:password@x.x.x.x/stream1

1. Open VLC software - Select Open Network Stream

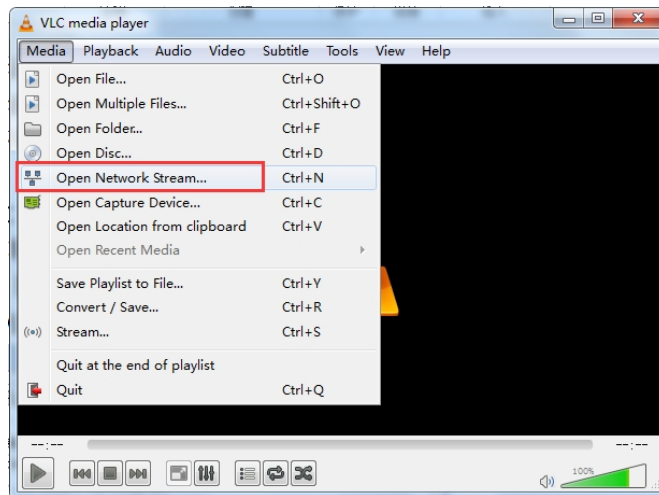

2. Input camera RTSP data(Main Stream)

