

How to view POE camera on VLC Player

(For both Windows and Mac PC, please download the corresponding version)


Add camera via RTSP data

RTSP data as below

main stream: `rtsp://ip address:554/live/0/MAIN`

vice stream: `rtsp://ip address:554/live/0/SUB`

1. Open VLC software - Select Open Network Stream

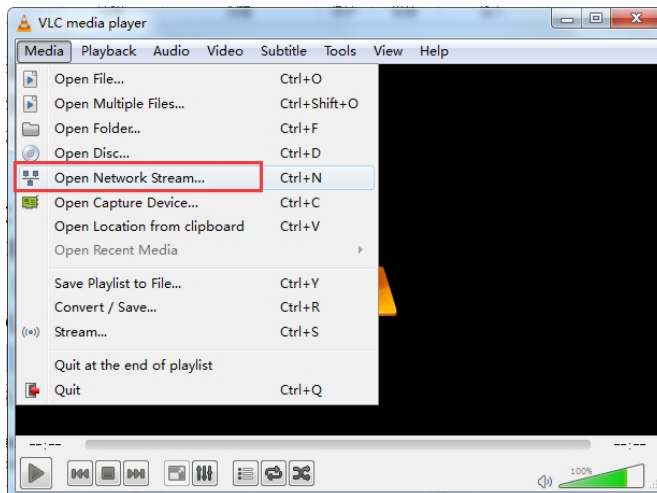

2. Input camera RTSP data(Main Stream)

