

Eine Kamera zu Blue Iris hinzufügen

Benutzen Sie RTSP zum Hinzufügen

MAIN: rtsp://<IP>:554/11

VICE : rtsp://<IP>:554/12

Wählen Sie RTSP, und geben Ihre RTSP-Daten ein. Dann auf "OK" klicken.

Network IP camera configuration

Address
http://
rtsp://

admin Password ***** Show Blank address to search for cameras Find/inspect...

rtmp://
rtmps://
Generic

Media/video/RTSP port 554
Discovery/ONVIF port 8999

Model RTSP H.264/MJPEG/MPEG4

Video
Path /
Params
Camera 1

Audio
Path
Format 16-bit PCM
Setup RTSP back-channel for talk support (PCM-U format)

Network options
Receive buffer (MB) 3.0
Use RTP/UDP ports: 7000
Send RTSP keep-alives
Use RTSP/stream timecode
Skip initial HTTP DNS and reachability tests
Decoder compatibility mode
Get events with PullPointSubscription

OK Cancel Help

Network IP camera configuration

Address
rtsp:// 192.168.20.53:554/11 Find/inspect...

User admin Password ***** Show Blank address to search for cameras

Make Generic
Model RTSP H.264/MJPEG/MPEG4

Media/video/RTSP port 554
Discovery/ONVIF port 8999

Video
Path /11
Params
Camera 1

Audio
Path
Format 16-bit PCM
Setup RTSP back-channel for talk support (PCM-U format)

Network options
Receive buffer (MB) 3.0
Use RTP/UDP ports: 7000
Send RTSP keep-alives
Use RTSP/stream timecode
Skip initial HTTP DNS and reachability tests
Decoder compatibility mode
Get events with PullPointSubscription

OK Cancel Help