

# How to view POE camera on VLC Player

(For both Windows and Mac PC, please download the corresponding version)

## Add camera via RTSP data


RTSP data as below

main stream: `rtsp://192.168.X.X:554/11`

vice stream: `rtsp://192.168.X.X:554/12`

phone stream: `rtsp://192.168.X.X:554/13`

1. Open VLC software - Select Open Network Stream

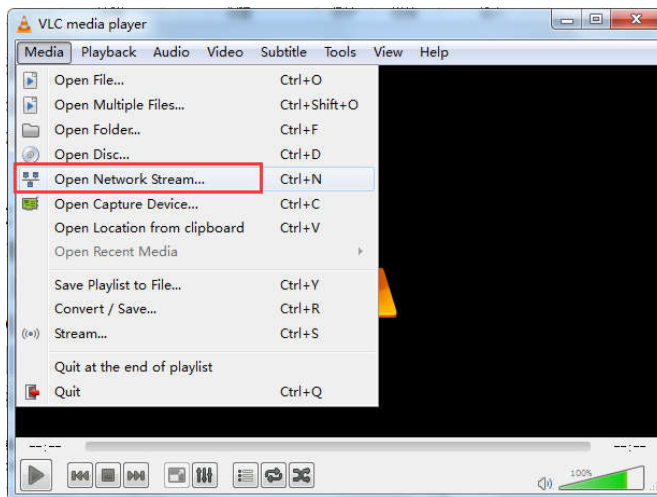

2. Input camera RTSP data(Main Stream)

